

swissvoice

Xtra 1110




USER'S GUIDE

TABLE OF CONTENT

DESCRIPTION OF TELEPHONE Xtra 1110	2
INSTALLATION	3
Recommendations	3
Telephone installation	3
Wall mounting	3
Insert a photo (or the SOS label) on one of the 6 memory keys	3
GENERAL USE	4
Make a call	4
Call from memories or emergency number (SOS)	4
Dial back an outgoing number	4
Answering a call	4
Set hands-free volume	4
Set handset volume (And audio-boost)	5
Handset receiver equalizer adjustment	5
PROGRAMMING	6
Program memory keys (SOS, Photos and M1, M2)	6
Setting flash time	6
Setting tone or pulse mode	6
WARRANTY	7
SECURITY	9
ENVIRONMENT	9
CONFORMITY	9

DESCRIPTION OF TELEPHONE Xtra 1110

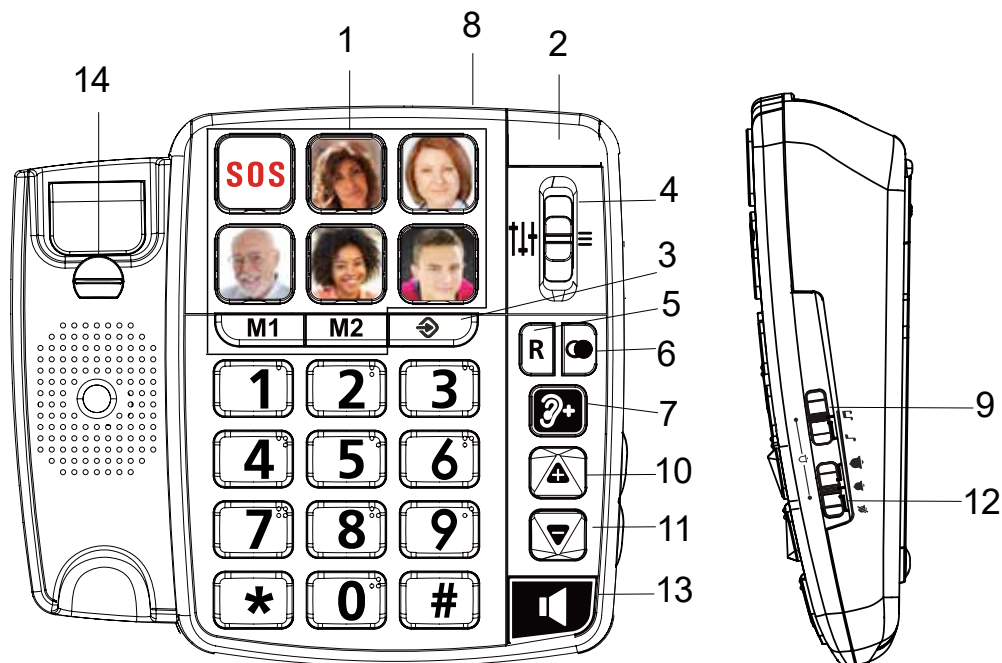

1. 8 one touch direct memories (SOS, Photos, M1 and M2)
2. Indicator: Ringer (incoming call)
3. Program key
4. Handset Receiver Equalizer
5. Flash key
6. Redial key
7. Audio boost (Handset receiver volume amplify)
8. Audio boost override
9. Ringer volume
10. & 11. Handsfree or Handset volume increase/decrease
12. Ringer volume switch
13. Handsfree key
14. Wall mounting knob


INSTALLATION

Recommandations

- Do not expose the phone to direct sunlight or excessive temperature.
- Operating temperature between + 5 ° C and + 40 ° C.
- Your phone must be installed at least 1 meter away from radio equipment such as television, cell phone, etc.

Telephone installation

- Your phone should be placed on a flat surface for more stability. Plug the coiled cord into the handset (A) and into the socket on the left side of the phone (B).
- Plug the telephone cord into the socket at the back of the set and into the wall outlet (C) or into the telephone port of the internet box. For desktop position, raise the 2 feet under the base (D).

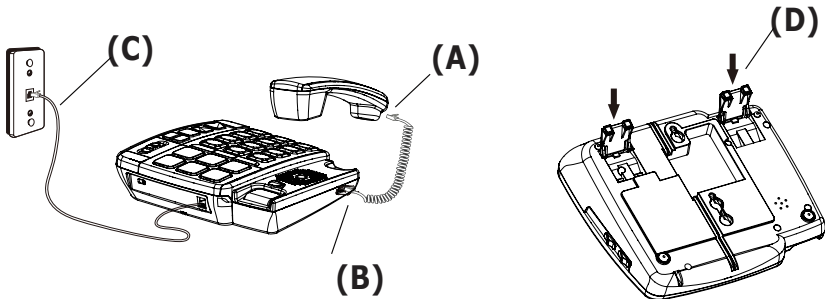

Wall mounting



- Fold the 2 feet under the base (D).
- Flip the small plastic piece on the base (14).
- Drill two 6mm holes spaced 100mm apart. Insert 2 wall plugs and screw in the wood screws (3.5 mm in diameter and 30 mm long).
- Mount the base to the 2 screws by pulling it downwards.

Insert a photo (or the SOS label) on one of the 6 memory keys



- Remove the transparent cover attached to the photo memory button.
- Cut out the chosen photo using the provided photo cutting guide.
- Put the photo on the key and replace the transparent cover on the photo.

GENERAL USE



Make a call

- Pick up the handset or press the  key.
- Dial the number using the keypad.
- To end the call : Put back the handset on the base or press the  key.



Call from memories or emergency number (SOS)

- Pick up the handset or press  key.
- Press the photo key, M1, M2 or SOS according to your choice. To register a number on these keys, see "Program memory keys."
- At the end of the call, hang up the handset or press  key.



Dial back an outgoing number

- Pick up the handset or press the  key.
- Press the  key.

Answering a call

- To answer : pick up the handset or press the  key (hands-free mode).
- To hang up : replace the handset on the base or press the  key.

Set hands-free volume

- During (hands-free) conversation.
- Press  to increase the volume.
- Press  to decrease the volume.
- 8 levels can be selected.


Set handset volume (And audio-boost)

During handset conversation, 2 modes of amplification are available:

- **Standard mode**


Press ▲ or ▼ to increase or decrease (4 levels).

- **Audio boost mode** (extra strong up to + 30dB)

During handset conversation, press the  key. Press this button again to stop amplification.


A slider on the back of the phone (AMPLIFY) is used to always activate the audio boost function. By default, the position is "OFF" If it is in the "ON" position, the audio boost will be automatically activated at each call.

Handset receiver equalizer adjustment

Slide the switch to adjust the handset receiver sound frequency pitch (bass or treble)  .








PROGRAMMING

Program memory keys (SOS, photos and M1, M2)

- 1) Pick up the handset.
- 2) Press .
- 3) Dial the phone number to be stored, eg 0612345678.
- 4) Press the memory key dedicated to this number (SOS, Photos, M1 or M2). The SOS number is the one you want to reach in case of emergency.
- 5) Hang up the handset. It is advisable to make a test to verify the registered number is correct.
- 6) To change the number, repeat the procedure from 1).

Setting flash time

By default, the programmed flash time is 300ms . If change is needed:

 +  /  /  /  /  /  = 100ms

 +  /  /  /  /  /  = 300ms

 +  /  /  /  /  /  = 600ms

Setting tone or pulse mode

By default, the TONE mode is programmed. To modify it:

-  +  /  /  /  /  /  = pulse

-  +  /  /  /  /  /  = tone

WARRANTY

Please read carefully the user guide included in this box. The product you just bought is a technological product, it must be handled with care.

Note: You have a legal warranty on this product in accordance with the regulations applicable to the sale of consumer goods in the country in which you made this purchase.

For any information regarding this legal warranty, please contact your dealer. Without prejudice to the legal guarantee of the products, ATLINKS guarantees that the product in this box conforms to its technical specifications contained in the user guide included in the this box, and this during a warranty period, counted from the date of purchase of the new product, the date on your invoice or ticket checkout where is indicated the name of your reseller, and equal to: Twenty four (24) months for the telephone, excluding consumables, accessories. For any claim under this warranty during the warranty period, you must return the entire Product to your dealer, together with the proof of purchase, the invoice or receipt issued by your dealer, indicating the place of purchase and the serial number of the Product, following the appearance or discovery of the defect. ATLINKS undertakes to repair any defective item due to a defect in design, material or workmanship, at its expense, or to replace, at its expense, by an identical or at least equivalent element in terms of functionalities and performance. If the repair or replacement is impossible under normal commercial conditions, the Product will be refunded or replaced by a Product equivalent. Within the maximum limit allowed by the applicable law, the product or element replacement, which may be new or reconditioned, is warranted during a period of ninety (90) days from the date of repair or until the end date of the initial warranty period, whichever is the earlier greater than ninety (90) days, it being specified that any period of immobilization of the Product of at least seven (7) days will be added to the warranty period remaining to run.

This warranty does not apply in the following cases:

- Installation or use not in accordance with the instructions in the guide of the user,
- Incorrect connection or abnormal use of the Product, especially with non-compatible accessories, as indicated in the user guide,
- Product opened, modified or replaced by means of non-approved parts, serial number deleted, illegible, damaged,
- Normal wear, including normal wear and tear on accessories, batteries and displays,
- Failure to comply with the technical and safety standards in force in the area geographical use,
- Product having suffered a shock or a fall,
- Product damaged by lightning, electrical surge, heat source or radiation, water damage, exposure to conditions of temperature, humidity or other excessive ambient conditions or any other cause external to the product,

- Negligence or faulty maintenance,
- An intervention, a modification or a repair carried out by a not authorized by ATLINKS.

If the returned Product is not covered by the warranty, you will receive a quote from repair that will mention the cost of analysis and transportation costs that you will be charged if you want the Product returned to you. This guarantee is valid in the country in which you regularly purchased the Product, provided that the country is a member of the European Union and the United Kingdom. Subject to the legal provisions in force, all warranties other than described herein are expressly excluded.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW,

- A) THIS WARRANTY IS EXCLUSIVE TO ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE PARTICULAR;
- B) ATLINKS DISCLAIMS LIABILITY FOR LOSS OR DETERIORATION OF DATA, LOSS OF USE LOST TO WIN, LOSS OF CHANCE, DEREVENUES OR INCOME, LOSS OF OPERATION, DAMAGES INDIRECT, CONSEQUENTIAL, CONSEQUENTIAL OR INCIDENTAL;
- (C) ATLINKS LIABILITY IS LIMITED TO THE VALUE OF PURCHASE OF PRODUCT EXCEPT HEAVIL OR UNINTENTIONAL FAULT AND EXCEPT DAMAGE BODY

SECURITY

Do not use your telephone to report for a gas leak or other potential explosion hazard. Do not try to open your phone to avoid electrical shock. Your telephone must be installed in a dry place, away from heat, humidity and direct sunlight.

ENVIRONNEMENT



This symbol means that your inoperative appliance must be collected separately and not mixed with the household waste.

■ *Help us preserve the environment in which we live!*

CONFORMITY

The logo printed on the products indicates the conformity with all essential requirements and all applicable directives. You can download the Declaration of Conformity from our website: www.swissvoice.net



Hereby, ATLINKS EUROPE declares that the radio equipment is in compliance with Legislation : Radio Equipment Regulations 2017 (SI 2017/1206). The full text of the UKCA declaration of conformity is available from our website: www.swissvoice.net



www.swissvoice.net

ATLINKS Europe
28 Boulevard Belle Rive
92500 RUEIL-MALMAISON France
RCS Nanterre 508 823 747

ATLINKS UK Ltd
3rd Floor, Waverley House
7-12 Noel Street, London, W1F 8GQ. UK
Company registration: 13809295

© ATLINKS 2022 - Reproduction prohibited.

The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.

SWISSVOICE and ATLINKS are registered trademarks.
The SWISSVOICE logo is trademark under license by ATLINKS.

Swissvoice Xtra 1110
A/W No.: 10001931 Rev.2 (EN)
Printed in China